

Visit our breastfeeding support website for new mother and father!

**BA** Breastfeeding Advisor™  
URL : [ba.pigeon.com.sg](http://ba.pigeon.com.sg)

**PIGEON**  
PIGEON CORPORATION  
4-4, Nihonbashi Hisamatsu-cho, Chuo-ku,  
Tokyo 103-8480 JAPAN  
[www.pigeon.com](http://www.pigeon.com)  
MADE IN CHINA  
CODE NO: 26221

**pigeon**

# Bottle and Food Warmer

## 26221

### Instruction Manual

**BPA  
FREE**

Please read this instruction manual prior to using the bottle and food warmer to ensure correct operation. Keep it in a safe place after reading.

The bottle and food warmer is referred to as “Warmer” throughout this manual.



## • CONTENTS •

Note .....	3
Features .....	4
How to Use .....	4-7
Repair and Maintenance .....	8
Quality Indication .....	8
Parts .....	9

## Note

- Please do not heat the milk or food for more than 1 hour to avoid losing nutrients or change in quality.
- Parents are advised to check the temperature of the food before feeding.
- Do not immerse the warmer in water.
- Do not heat up breastmilk using 'Heating / Rapid Heating' mode.

## WARNING

- Keep appliance out of reach from children.
- Do not remove power plug or shift the warmer when in use.
- The warmer's power supply is non-replaceable. If the power supply or warmer is damaged, please stop using it.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should not play with the appliance.
- Cleaning and user maintenance should not be made by children without supervision.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.
- Do not immerse the cord, plug or appliance in water or other liquid for cleaning.

## CAUTION

- Do not use components or accessories from other manufacturers. Warranty will be void if other components or accessories are used.
- Do not expose warmer under high temperature or direct sunlight.
- Shift or keep warmer only when it has cooled down completely.
- Once the warmer has cooled down completely after use, pour out remaining water, wipe clean and dry it.
- Do not dispose warmer with other household waste. Recycle it responsibly to promote the sustainable reuse of material resources.
- It is not recommended to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Young children should be supervised to ensure that they do not play with the appliance.
- When power is off or warmer not in use, plug off power plug immediately.
- Usage of this appliance for other than its intended purpose may result in injury.

## Features

- 3 heating modes : Keep Warm, Heating and Rapid Heating, to satisfy different needs.
- The warmer is suitable for all PIGEON nursing bottles and breastmilk storage bags.
- Milk bottle ladle and food tray is provided for convenience.
- Night Lamp function provides ease of use at night.

## How To Use

### ① Keep Warm (around 37°C)



#### Step 1

Place the warmer flat on the table.

4



#### Step 2

Pour in suitable amount of clean water into the warmer.

**Note:** When heating the bottle, breastmilk storage bag or Food Tray, add 140ml of clean water.



#### Step 3

Place the container with the food (supplements / breastmilk / formula milk) steadily into the warmer.

\* For small bottles below 160ml, we suggest to use it with Milk Bottle Ladle.



#### Step 4

Once the power is ON, the Night Lamp will be turned ON. Turn the switch to Keep Warm mode.

For the time required for the food to reach preset temperature, please refer to «Reference Sheet on Heating Duration of Warmer» in the **【Quick Operating Guide】**.



When the Indicator Light is ON, the warmer will START heating.



When the Indicator Light is OFF, the warmer will STOP heating.

When the temperature of the water in the warmer decreases, Keep Warm mode will be reactivated.

5

## ② Heating (around 70°C)



### Step 1

Place warmer flat on the table.



### Step 2

Pour 140ml of clean water into the warmer.  
(You may refer to the scale on PIGEON bottle to confirm the water volume)



### Step 3

Pour the drinking water into the container (milk bottle or Food Tray) before placing it into the warmer.



### Step 4

Once the power is ON, the night light will be turned ON.  
Turn the switch to Heating mode.

For the time required for the food to reach preset temperature, please refer to «Reference Sheet on Heating Duration of Warmer» under **【Quick Operating Guide】**.



When the Indicator Light is ON, the warmer will START heating.



When the Indicator Light is OFF, the warmer will STOP heating.

When the temperature of the water in the warmer decreases, the Heating mode will be reactivated.

## ③ Rapid Heating (around 95°C)

For rapidly heating of food, please refer to Keep Warm / Heating Steps 1-3 before turning ON the power.



### Step 4

Once the power is ON, the Night Lamp will be turned ON.  
Turn the switch to Rapid Heating mode.



For the time required for the food to reach preset temperature, please refer to «Reference Sheet on Heating Duration of Warmer» under **【Quick Operating Guide】**.

When Indicator Light is ON, the Warmer will start heating. When the Indicator Light is OFF, the warmer will stop heating.



\* Check the temperature while heating. Once the food is heated to a suitable temperature, turn the knob back to Keep Warm mode immediately.

When the temperature of the water in the warmer decreases, the Rapid Heating mode will be reactivated.

## Gentle Reminder

- The speed of the warmer in heating milk or baby food will be affected by many factors, including bottle quality, volume, or the initial temperature and environmental temperature (room temperature) of the milk or baby food.
- Before feeding, parents should verify the temperature of the food.
- Do not shift the warmer when in use, since the warmer's temperature will gradually increase. In order to retain nutrients in breastmilk more effectively, we recommend using 'Keep Warm' mode to heat it mildly for no more than 1 hour.
- To retain nutrients and quality of breast milk, baby should be fed immediately after breast milk is warmed up.

## Repair & Maintenance

1. After using, please unplug the power cord, and let the warmer cool down naturally.
2. Pour away the remaining water in the warmer, wipe it clean, and leave it out in a ventilated area to dry.
3. Wash and dry the Milk Bottle Ladle and Food Tray / Cover after using.
4. Use clean water to reduce the amount of scale deposits.
5. Regularly remove (once a month recommended) dirt from the warmer to ensure that its working efficiency is not compromised.
6. The product has to be repaired by professional staff. If you discover any quality issues, do not open up the warmer on your own.

**Deposits removal:** Add 50ml of white vinegar and 100ml of water into the warmer. After all deposits are dissolved, pour away the water from the warmer and wash thoroughly.

## Quality Indication

Parts	Material	Heat Resistance	Sterilization Method
Milk Bottle Ladle, Food Tray/Cover	Polypropylene	110°C	Boiling, steam sterilization or microwave sterilization
Milk Warmer			Do not sterilize
Heating Plate	Stainless Steel	/	

## Key Technical Parameters

Product Name	Bottle and Food Warmer	Power Consumption	300W
Voltage	AC 220 ~ 240v 50 ~ 60Hz	Weight	511g
Measurements	115(L)x126(W)x160(H) mm		

## Parts

